


MODEL 451.3/ 4

- 1 Upper steering column trim
- 2 Lower steering column trim
- 3 Bolts
- 4 Guides
- 5 Brackets
- 6 Bracket
- 7 Catch hook
- 8 Guides

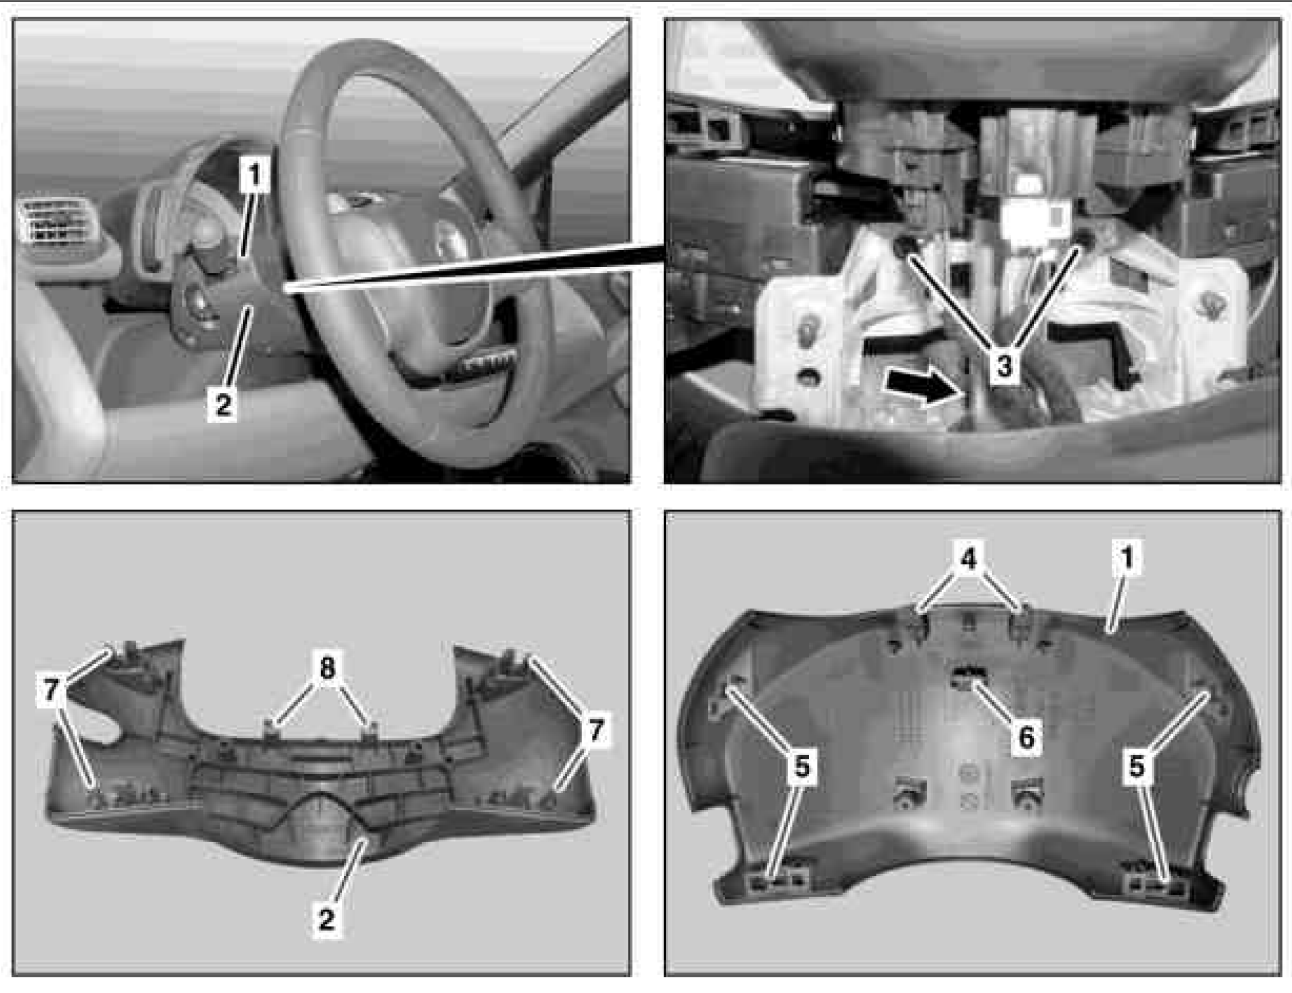

P68.30-3314-06

	Remove/install		
1	Unclip catch hook (7) on lower steering column trim (2) from brackets (5) on upper steering column trim (1) and remove lower steering column trim (2)	i Installation: First position guides (8) in area of instrument panel.	

2	Unscrew bolts (3) from upper steering column trim (1)		
3	Unclip bracket (6) from jacket tube in marked area (arrow) with suitable screwdriver and carefully remove upper steering column trim (1) upward	 A cutout is located in the bearing shell of the jacket tube in the marked area (arrow), through which the bracket (6) is accessible.  Installation: First position guides (4) in area of instrument panel.	
4	Install in the reverse order		